


# Connection Wires

Model : Realtime TD1D

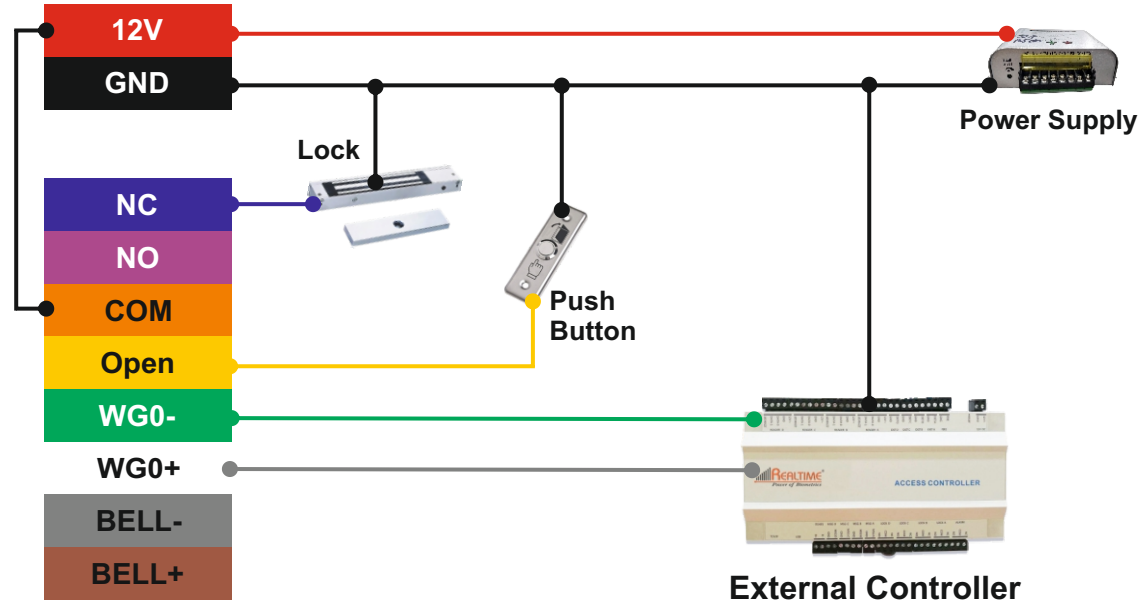

#### IV. Administrator Operation

- Press (\*) and there is a beep while the red light turns on
- Enter administrator password (initial password: 123456)
- Verification request succeeds (while the blue light turns on)
- Exit (by pressing #)

**Remarks:**  
After successful verification, user is allowed to register Administrator account. Then the initial password will be invalid.

##### 4.1 Registering Administrator

- Enter administrator password for verification. Once verification request succeeds the blue light turns on
- Press (\*) and the orange light turns on
- Register administrator via fingerprint or card (input fingerprint twice or read card once)
- Once registration request succeeds, there is a long beep and the blue light blinks once
- Exit (by pressing #)

**Remarks:**  
It is allowed to register with 5 administrator only via fingerprint or card.

##### 4.2 If the administrator password is lost.

Power off press # holds and power on after 5 seconds, there will be one long beep, means delete the master successfully, then release the button.

**Attention:** Do not release the # button until one long beep.

- 4 -



#### V. To enroll a new user

5.1 A new users ID will be generated automatically.

- Enter administrator password for verification. Once verification request succeeds, the blue light turns on
- Register administrator via fingerprint or card (input fingerprint twice or read card once)
- Once registration request succeeds
- Exit (by pressing #)

5.2 Register users by inputting the Employee ID directly

- Enter administrator password for verification. Once verification request succeeds, the blue light turns on
- Enter the number # (number 1-4 digits)
- Register user via fingerprint card or password (input fingerprint twice or read card once or enter password once)
- Once registration request succeeds, there is a long beep and the blue light blinks once.
- Exit (by pressing #)

**Note: the password is 4-6 bits**

#### VI. Verification

##### 6.1 User Verification via Fingerprint or Card

- Standby mode
- Input fingerprint or read card
- Verification request succeed (There is a long beep sound and the blue light blinks once)

Verification request fails (it beeps three times and the red light turns on)

- 5 -



##### 6.2 User Verification via Password

- Standby mode
- Input the password #
- Verification request succeed (There is a long beep sound and the blue light blinks once)

Verification request fails (it beeps twice and the red light turns on)

#### VII: Deleting Users

##### 7.1 Delete a User

- Enter administrator password for verification. Once verification request succeeds the blue light turns on
- Press (\*) or enter administrator password (red light shining for long time)
- Enter employee ID# input fingerprint or read card
- it beeps twice and the red light turns on
- To delete the users successfully-there will be a long sound with blue light turning on.
- To recognize if the user is valid.
- Exit (by pressing #)

##### 7.2 Delete All Users

- Enter administrator password for verification. Once verification request succeeds, the blue light turns on
- Press (\*) There will be a red light shining for long time
- Enter (0000#)
- After successful deletion on all users, there is a long beep and the blue light blinks once.
- Exit (by pressing #)

- 6 -



#### VIII: Access Control System Management

##### 8.1 System Settings

- Enter administrator password for verification. Once verification request succeeds the blue light turns on
- Press (\*) and the orange light turns on
- Set system Press (\*90#) for menu initialization; Press (\*91#) for system initialization; Press (\*92#) to delete administrator.
- Exit (by pressing #)

##### 8.2 Setup the time for unlocking.

- Enter administrator password for verification. Once verification request succeeds, the blue light turns on
- Press (\*) and the orange light turns on
- Set unlocking time (ranging from 0 to 99 seconds) and press # to confirm.
- Setup succeeds. There is a long beep and the blue light blinks once
- Return to verification (there is a long beep and the blue light blinks once)

The functions for the U Disc is as follows.  
To connect the U Disc, input manager fingerprint, manager card or manager password and being back to menu after successful verification.  
**Note:** 1, The machine and U Disc will synchronize dates.  
2, The user information in the machine will be updated by U Disc.

#### IX: Unpacking

Description	Specifications	Quantity	Remarks
Device		1	
Packaging box		1	
Plastic plugs	Φ4mm×28mm	4	For mounting and fixing
Self-tapping screws	Φ4mm×28mm	4	For mounting and fixing

- 7 -